


- ① - ESTABLISH CENTER BETWEEN RINGS BY LINING TAPE UP WITH THE CENTER ROOF JOIST OF THE ARENA.
- ② - OFFSET THE TAPE 2.5' EITHER SIDE OF CENTER LINE WITH STRING LINE TO ESTABLISH 5' CENTER AISLE.
- ③ - MEASURE 110'4" FROM WOODEN FENCE AT BOTTOM OF MAP UP TO TOP ALONG THE STRINGS LINES TO SET UPPER INSIDE CORNERS OF BOTH RINGS.
- ④ - MEASURE THE 9'11" DIMENSION FROM UPPER WOODEN FENCE TO ESTABLISH THE DIRECTION OF THE 83'4" AND 84'5" DIMENSIONS TO SET NEXT FENCE CORNERS, THEN SET 6' ANGLES AT LOWER INSIDE END OF RINGS.

- ⑤ - MEASURE THE 105'5" AND 105'1" DIMENSIONS TO EACH SIDE TO ESTABLISH RING WIDTHS.
- ⑥ - MEASURE CLEARANCE FROM WOODEN FENCES AT ENDS TO CONFIRM CLEARANCE FOR WARMUP JUMP ON RIGHT SIDE AND FENCING ON LEFT SIDE.
- ⑦ - COURSE FENCING FOR CURVES WILL BE SET USING THE OFFSETS SHOWN FOR THE CLEARANCES WITH THE WOODEN FENCE.
NOTE: THERE IS SOME ESTIMATION NECESSARY FOR THIS STEP.
- ⑧ - MEASURE 50' FROM EITHER END AND DO A MEASUREMENT OF THE RADIUS DIMENSIONS SHOWN AS A QUICK CHECK ON THE CURVED SECTIONS.
- ⑨ - ESTABLISH THE GATE LOCATIONS FROM THE CORNERS SHOWN.

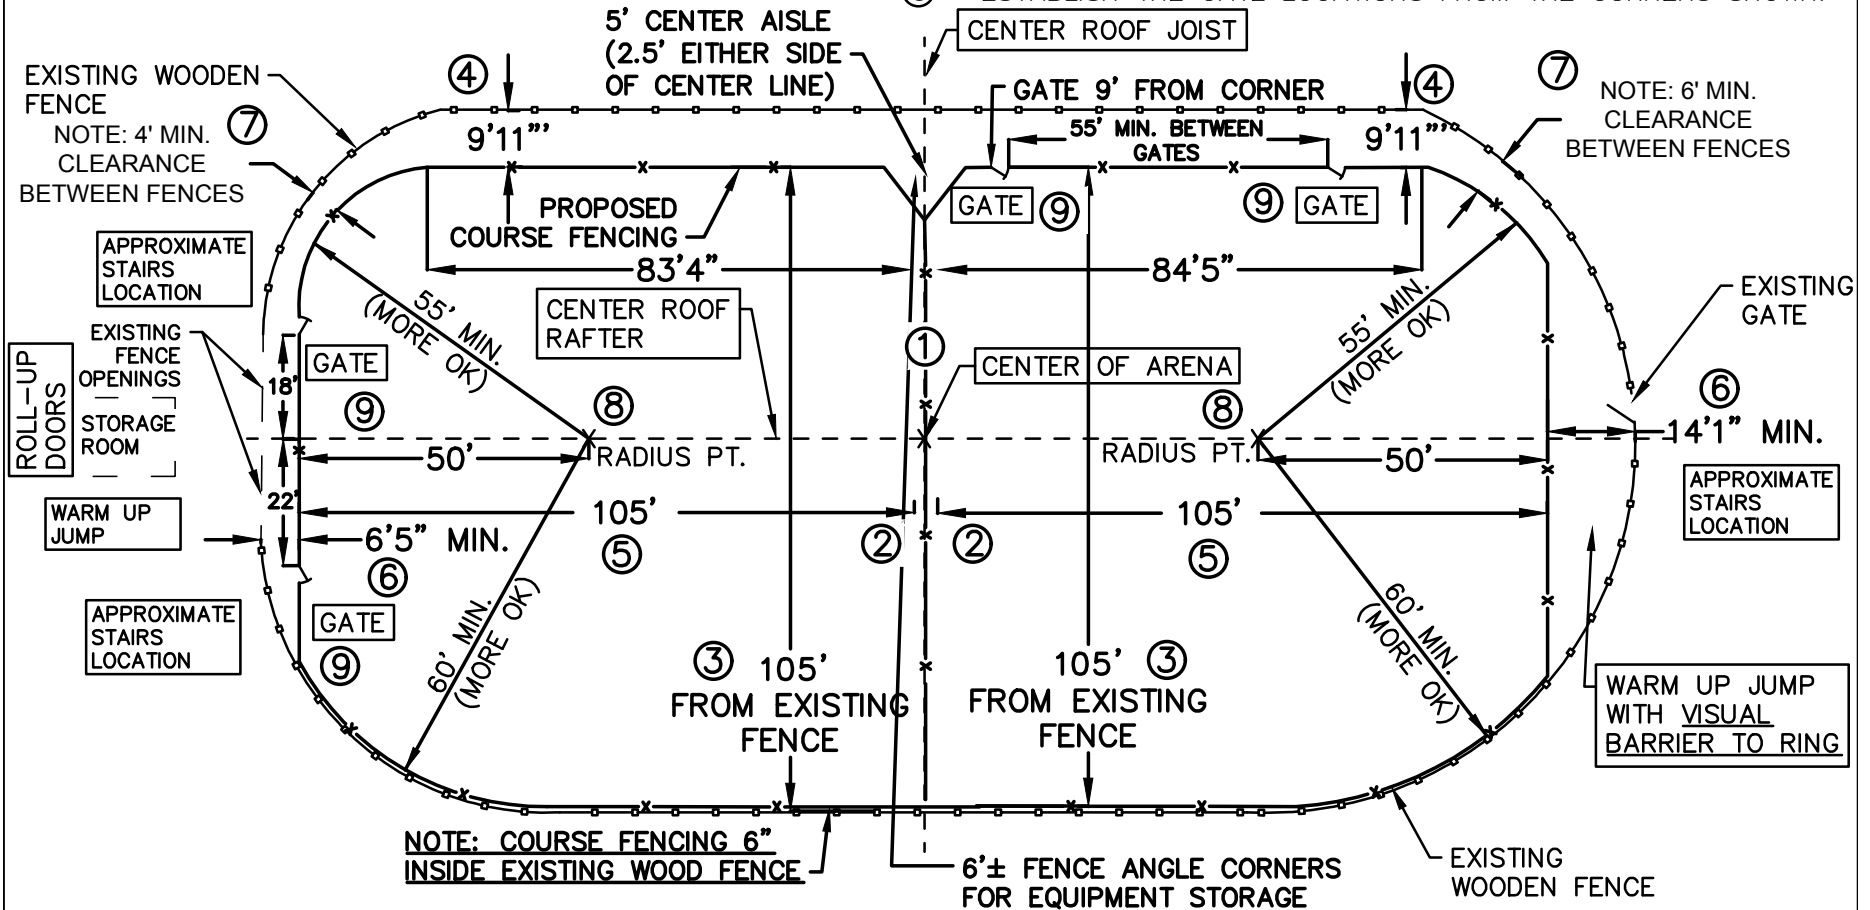

**FLETCHER AG CENTER ARENA
AGILITY COURSE FENCING LAYOUT**

NOT TO SCALE

NOTE: INTERIOR DIMENSIONS FOR THE COURSE SHALL TAKE PRIORITY OVER OTHER DIMENSIONS